



Maintenance Kit Installation Instructions

HP LaserJet 4000/4050/4100

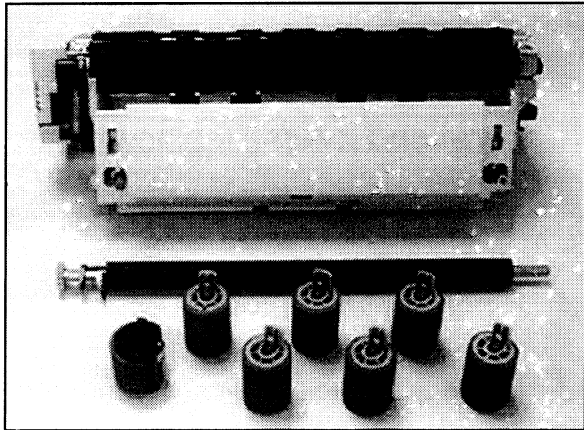


Contents of Maintenance Kit

- 1 - Fuser (LaserJet 4000 fuser shown)
- 6 - Feed/Separation Rollers
- 1 - Transfer Roller
- 1 - Tray 1 Pickup Roller
- 1 - Tray 1 Separation Pad (4100 ONLY)

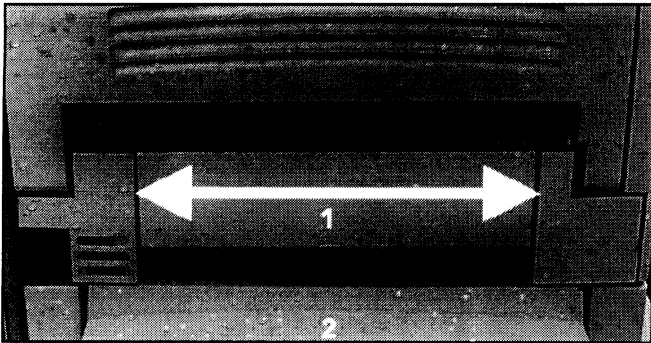


Fuser Removal


1. For the LaserJet 4000/4050, remove two small panels on the rear of the printer (arrow 1) and the rear tray cover (number 2). The small panels and tray cover are one piece on the LaserJet 4100.

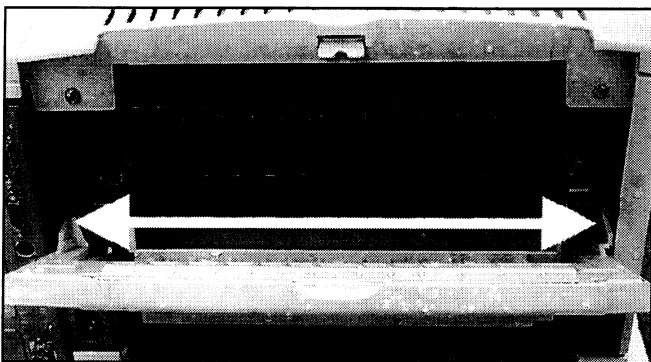

2. Open and remove rear tray by carefully bending hinges to clear pins (white arrow).

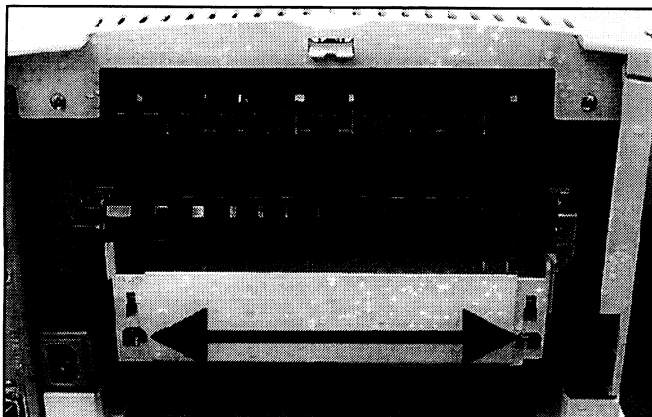


3. Loosen two captive screws (black arrow, LJ 4000 only) or blue lock levers (LJ 4100 only).
4. Slide fuser out of rear of printer.

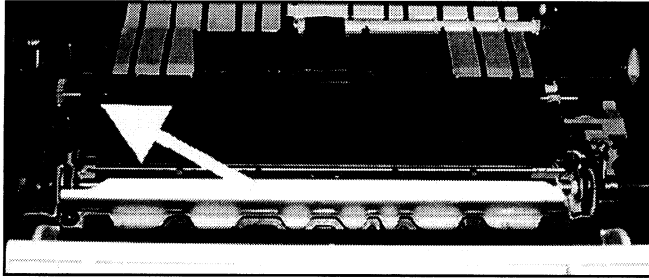


Transfer Roller Replacement

1. Open top cover.
2. Remove toner cartridge.
3. Pry up transfer roller from the left side (white arrow).
4. Install new transfer roller right side first. Avoid touching the transfer roller with your fingers, as this can cause contamination and adversely affect print quality.
5. Remove paper protector.

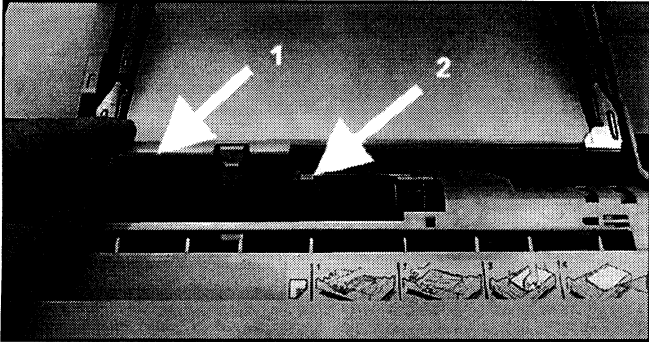


Feed/Separation Rollers Replacement

1. Remove cassette.
2. Open access door in tray (arrow 1) and remove separation roller by pinching blue lock tab (arrow 2).
3. Reinstall new separation roller.
4. Repeat for each cassette.

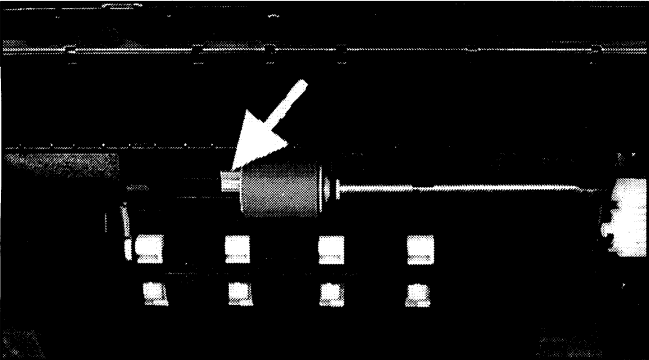


5. Remove feed roller from inside cassette area by pinching blue lock tab on roller (white arrow).
6. Reinstall new feed roller.
7. Repeat for each cassette.

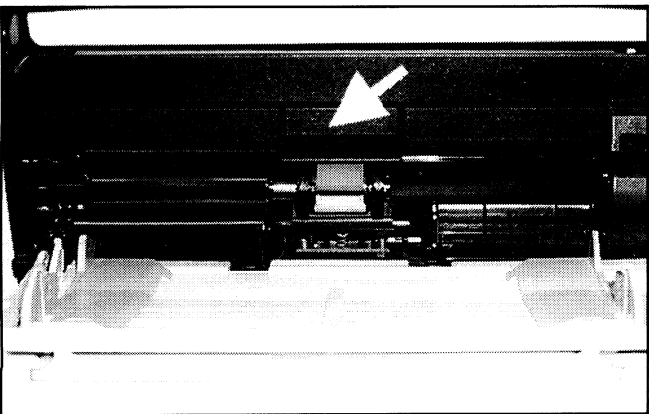

Tray 1 Pickup Roller Replacement

1. Open tray 1.
2. Remove dust cover above roller (white arrow).
3. Remove roller by unlocking blue tab.
4. Install new roller and lock blue tab.
5. Reinstall dust cover.

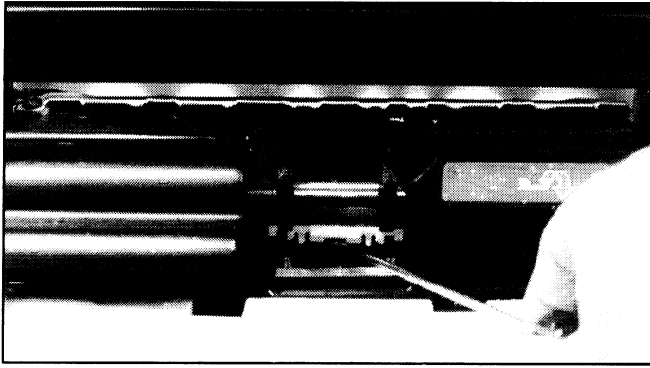

LaserJet 4100 Tray 1 Separation Pad Replacement—pad (LJ 4100 Only)

1. Remove pickup roller.
2. Use flat screwdriver to pry up removable pad and replace with new pad.

Resetting Maintenance Counter

Hold down the left side of the “Item” and the left side of the “Value” buttons while powering on the printer.

Trouble-shooting

- 50 Error:
1. Turn printer off.
 2. Reinstall fuser.

- 13 Paper Jam:
1. Verify all feed/separation rollers are clipped onto shaft properly.
 2. Check paper sensor flags in fuser for freedom of movement.
 3. Check paper path for paper, paying extra attention to the area forward of the tray 1 pickup assembly.

4000/4050 Separation Pad NOT INCLUDED

